

# TELEPHONE



## CORDLESS PHONE BATTERY REFERENCE CHART

### Cordless Phone Batteries

IMPORTANT: When connecting any battery to your telephone, polarity must be checked. Installing a battery with incorrect polarity can cause serious damage to the telephone.

NOTE: For optimum performance, match your original battery to the replacement battery.

	<b>30-9380</b> 2.4v – 1500 mAH, Ni-MH 	<b>30-9386</b> 3.6v – 320 mAH, Ni-MH 
<b>30-9375</b> 3.6v – 700 mAH, NiCd 	<b>30-9381</b> 2.4v – 700 mAH, NiCd 	<b>30-9387</b> 3.6v – 280 mAH, Ni-MH 
<b>30-9376</b> 3.6v – 1000 mAH, NiCd 	<b>30-9382</b> 3.6v – 400 mAH, NiCd 	<b>30-9388</b> 3.6v – 720 mAH, Ni-MH 
<b>30-9377</b> 3.6v – 400 mAH, NiCd 	<b>30-9383</b> 3.6v – 600 mAH, Ni-MH 	<b>30-9389</b> 3.6v – 1000 mAH, NiCd 
<b>30-9378</b> 3.6v – 1200 mAH, Ni-MH 	<b>30-9384</b> 2.4v – 300 mAH, NiCd 	<b>30-9390</b> 3.6v – 700 mAH, NiCd 
<b>30-9379</b> 2.4v – 1500 mAH, Ni-MH 	<b>30-9385</b> 3.6v – 500 mAH, NiCd 	<b>30-9391</b> 3.6v – 700 mAH, NiCd 

For the latest information—[www.gcelectronics.com](http://www.gcelectronics.com)

All quantities are single; BU's are packages of 10 Unless otherwise noted.

## CORDLESS PHONE BATTERY REFERENCE CHART (Cont.)

### Cordless Phone Batteries (Cont.)

<p>30-9392 4.8v – 700 mAH, NiCd</p> 	<p>30-9431 3.6v – 700 mAH, NiCd</p> 	<p>30-9475 3.6v – 700 mAH, NiCd</p> 
<p>30-9393 3.6v – 700 mAH, NiCd</p> 	<p>30-9433 3.6v – 280 mAH, NiCd</p> 	<p>30-9491 3.6v – 300 mAH, NiCd</p> 
<p>30-9394 3.6v – 1300 mAH, Ni-MH</p> 	<p>30-9442 3.6v – 300 mAH, NiCd</p> 	<p>30-9493 4.0v – 500 mAH, NiCd</p> 
<p>30-9395 3.6v – 400 mAH, Ni-MH</p> 	<p>30-9443 3.6v – 600 mAH, NiCd</p> 	<p>30-9494 3.6v – 300 mAH, NiCd</p> 
<p>30-9396 2.4v – 1500 mAH, Ni-MH</p> 	<p>30-9444 3.6v – 700 mAH, NiCd</p> 	<p>30-9495 3.6v – 300 mAH, NiCd</p> 
<p>30-9397 3.6v – 1300 mAH, Ni-MH</p> 	<p>30-9470 3.6v – 700 mAH, NiCd</p> 	<p>30-9496 6.0v – 600 mAH, NiCd</p> 
<p>30-9398 2.4v – 300 mAH, NiCd</p> 	<p>30-9473 3.6v – 700 mAH, NiCd</p> 	<p>30-9499 3.6v – 300 mAH, NiCd</p> 

# TELEPHONE



## CORDLESS PHONE BATTERY REFERENCE CHART (Cont.)

### Cordless Phone Batteries (Cont.)

PHONE MFR. NO.	GC BATTERY NO.	PHONE MFR. NO.	GC BATTERY NO.	PHONE MFR. NO.	GC BATTERY NO.
<b>AT&amp;T TELEPHONE</b>		<b>AT&amp;T TELEPHONE (continued)</b>		<b>BELL SOUTH TELEPHONE (continued)</b>	
200/250/400	30-9470	24218	30-9493	33010X	30-9386
450 / 500	30-9491	24280	30-9443	3533Z / 3890Z / 531X / 532X / 581B / 582B	30-9442
1076	30-9392	59768	30-9491	582Z / 676X / 674X / 675X / 796BK	30-9442
1430 / 1455 / 1480	30-9394	90556	30-9431	B650	30-9475
2230 / 2255	30-9377	90817	30-9385	CP-330	30-9470
2400 / 2401 / 2402	30-9380	90846	30-9393	Excelstor 3101	30-9499
2412 / 2414	30-9394	90847	30-9390	HAC5300 / HAC531 / HAC531XB / HAC532	30-9442
2422	30-9377	90848	30-9475	HAC532X / HAC534 / HAC535 / HAC581	30-9442
2440 / 2455 / 2462	30-9380	91076	30-9431	HAC581B / HAC582 / HAC582B / HAC583B	30-9442
3093	30-9496	91077	30-9380	HAC629 / HAC639 / HAC660 / HAC661	30-9442
3094	30-9443	4000X	30-9491	HAC664 / HAC665 / HAC667 / HAC668	30-9442
3300 / 3301	30-9431	BT1711	30-9390	HAC670X / HAC672X / HAC673X / HAC674X	30-9442
3400 / 3410	30-9491	BT990	30-9393	HAC675 / HAC677 / HAC678 / HAC684	30-9442
3470 / 3470	30-9390	HS-8201 / HS-8211 / HS-8241 / HS-8243	30-9431	HAC688 / HAC689 / HAC698 / HAC699	30-9442
3500	30-9385	HS-8500	30-9385	HAC700 / HAC702 / HAC711 / HAC799	30-9442
4045	30-9442	HT3400 / HT4200 / HT4210 / HT4400 / HT4410	30-9491	HAC810 / HAC822 / HAC863 / HAC892	30-9442
4050	30-9495	HT5200 / HT4400 / HT4410 / HT5320 / HT5500	30-9491	MH9003 / MH9005 / MH9006 / MH9007	30-9475
4051 / 4068	30-9499	Merlin MCL5 / NOMAD 3000	30-9491	MH9008 / MH9011 / MH9012 / MH9017	30-9475
4100 / 4110	30-9491	NOMAD 4410 / NOMAD5200 / NOMAD 5300	30-9491	MH9018 / MH9019 / MH9020 / MH9022	30-9475
4126	30-9444	VOIP 6100	30-9431	MH9026BK / MH9033 / MH9034 / MH9040	30-9475
4128	30-9499			MH9042 / MH9043 / MH9044 / MH9045	30-9475
4132	30-9384			MH9047 / MH9048B / MH9049 / MH9050	30-9475
4200 / 4210	30-9491	<b>AUDIOSONIC TELEPHONE</b>		MH9115 / MH9116 / MH9155 / MH9903	30-9475
4266	30-9433	T120	30-9470	MH9910 / MH9911 / MH9912 / MH9913	30-9475
4291	30-9393	<b>AUDIOVOX TELEPHONE</b>		MH9914 / MH9915BK / MH9917 / MH9918	30-9475
4300 / 4305 / 4310 / 4315 / 4320 / 4325	30-9491	AT-11	30-9470	MH9920 / MH9921 / MH9926BK / MH9930	30-9475
4330 / 4331 / 4335 / 4336 / 4337 / 4340	30-9491	AT-20	30-9470	MH9931 / MH9932 / MH9933 / MH9934 / MH9950	30-9475
4345 / 4400 / 4410 / 4500 / 4600 / 4605	30-9491			Southwind 624 / 626 / 628 / 636 / 637 / 638 / 639	30-9442
4610 / 4615 / 4690 / 4695 / 4725 / 4800	30-9491	<b>BELL SOUTH TELEPHONE</b>		Southwind 673 / 675 / 676 / 678 / 680 / 686 / 697	30-9442
4805 / 4810 / 4815 / 4905	30-9491	530 / 531 / 532 / 533 / 534 / 535	30-9442	Southwind 698 / 699 / 711 / 7110 / 721	30-9442
4935 / 4952	30-9499	540 / 541 / 542 / 543 / 544 / 546 / 547	30-9386	YCL-3887 / YCL-3890	30-9442
5200 / 5210 / 5220 / 5250 / 5300 / 5310	30-9491	581 / 582 / 583 / 584 / 624 / 626 / 627 / 628 / 629	30-9442	YCL-7701 / YCL-7702 / YCL-7703	30-9491
5320 / 5225 / 5352 / 5400 / 5405 / 5450	30-9491	633 / 634 / 636 / 637 / 638 / 639 / 640 / 641 / 660	30-9442		
5455 / 5460 / 5470 / 5471 / 5475 / 5480	30-9491	661 / 663 / 664 / 665 / 666 / 667 / 668 / 669 / 670	30-9442	<b>COBRA TELEPHONE</b>	
5481 / 5483 / 5484 / 5489 / 5490 / 5491	30-9491	671 / 672 / 673 / 674 / 675 / 676 / 677 / 678 / 679	30-9442	210	30-9491
5495 / 5500 / 5510 / 5515 / 5520 / 5552	30-9491	680 / 684 / 685 / 686 / 687 / 688 / 689 / 690 / 695	30-9442	7050	30-9495
5600 / 5630 / 5631 / 5635 / 5650 / 5655	30-9491	697 / 698 / 699 / 700 / 701 / 702 / 711 / 721 / 756	30-9442	9050	30-9496
5700 / 5710 / 5715 / 5830 / 5860	30-9491	756 / 766 / 769 / 788 / 797 / 798 / 799 / 810 / 820	30-9442	76300	30-9473
6200	30-9431	822 / 825 / 826 / 827 / 837 / 860 / 861 / 862 / 863	30-9442	2130099001	30-9475
7210 / 7215 / 7220 / 7225 / 7230 / 7310	30-9491	890 / 891 / 892 / 895	30-9442	2130139001	30-9495
7330 / 7340 / 7345 / 7415 / 7420 / 7510	30-9491	2541 / 2544	30-9386	730C	30-9473
7512 / 7610 / 7620 / 7625 / 7630 / 7640	30-9491	2673 / 2676 / 2677 / 2678 / 2679 / 3530	30-9442	AN-8525 / AN-8526 / AN-8591 / AN-8630	30-9495
7650 / 7700 / 7710 / 7715 / 7720	30-9491	3531 / 3533 / 3534 / 3535 / 3540	30-9442	AN-8630-25 / C9-4695 / CAP7010 / CAP7110	30-9495
8210 / 8211 / 8240 / 8241 / 8243 / 8255 / 8270	30-9431	3541 / 3542	30-9386	CP-91 / CP-92 / CP-93 / CP-98 / CP-99 / CP-99S	30-9470
9002 / 9050	30-9390	3581 / 3582 / 3583 / 3584 / 3671 / 3675 / 3685	30-9442	CP-100 / CP-100S / CP-100SA / CP-110	30-9470,30-9475
9100	30-9496	3722 / 3723 / 3724 / 3732 / 3733 / 3734 / 3744	30-9386	CP-110SA / CP-110SA / CP-115	30-9470,30-9475
9105 / 9107 / 9110	30-9390	3800 / 3801 / 3805	30-9386	CP-1155	30-9444
9120	30-9496	3866 / 3868 / 3877 / 3887 / 3890 / 3891 / 3892	30-9442	CP-1155 / CP-115SA / CP-120 / CP-120S	30-9470,30-9475
9125	30-9390	3893 / 3894 / 3895	30-9442	CP-120SA / CP-130 / CP-130S / CP-130SA	30-9470,30-9475
9140	30-9431	3901 / 3903 / 3904 / 3950 / 3951 / 3971 / 3973	30-9386	CP-140 / CP-140S / CP-140SA	30-9470,30-9475
9200	30-9390	6530 / 7110	30-9442	CP-200SA / CP-200SA	30-9470
9210 / 9230	30-9431	9003 / 9005 / 9007 / 9011 / 9017 / 9018 / 9019	30-9475	CP-205SA / CP-2058A	30-9444
9300	30-9392	9020 / 9022 / 9026 / 9033 / 9040 / 9042 / 9043	30-9475	CP-205S / CP-205SA / CP-206S/SA	30-9470
9301 / 9307 / 9311 / 9312	30-9431	9044 / 9045 / 9047 / 9049 / 9050 / 9082 / 9115	30-9475	CP-210 / CP-210S / CP-220 / CP-220S	30-9470,30-9475
9320 / 9340 / 9341 / 9345	30-9431	9402 / 9903 / 9910 / 9911 / 9912 / 9913 / 9914	30-9475	CP-250SA	30-9470
9350	30-9390	9915 / 9917 / 9920 / 9921 / 9926 / 9930 / 9931	30-9475	CP-2500 / CP-2501 / CP-2505 / CP-2506	30-9495
9350 / 9351 / 9353 / 9355 / 9365 / 9370 / 9371	30-9431	9932 / 9933 / 9934 / 9950	30-9475	CP-2507 / CP-2510 / CP-2525 / CP-2530 / CP-2570	30-9495
9400	30-9443	23722 / 23724 / 23726	30-9386	CP-206SA	30-9470
9410	30-9431	23730	30-9442	CP-260 / CP-301S / CP-302S	30-9473
9450	30-9443	23732 / 23733 / 23736 / 23737 / 23740	30-9386	CP-310S / CP320S	30-9444
9460 / 9465	30-9431	29530 / 29614 / 29615 / 29616 / 29635	30-9491	CP-330 / CP-330S	30-9470,30-9475
9520	30-9385	29638 / 29645 / 29735	30-9491	CP-355 / CP-355S / CP-355S	30-9444
23402	30-9377	33002 / 33003 / 3304 / 33005 / 33007 / 33008	30-9386	CP-43B	30-9495
23403	30-9394	33009	30-9442	CP-4403	30-9470
24027	30-9499	33010	30-9491	CP-440S / CP-443S / CP-445S / CP447S	30-9475
24028	30-9495	33011	30-9442	CP-450S / CP460S	30-9475
24029	30-9433	33012 / 33013	30-9386	CP-464 / CP-464S / CP-468	30-9495
24032	30-9444	33014	30-9442	CP-469S / CP-470 / CP-470S / CP-471	30-9495
24112	30-9499	33015 / 33016 / 33017 / 33018 / 33019	30-9386	CP-471S / CP-472S / CP-472S / CP-473	30-9495
24114	30-9384	33020	30-9442	CP-473S / CP-474/CP-474S/CP-475/CP-475S	30-9495
24117	30-9390	33030	30-9387	CP-477S / CP-478	30-9473
24161	30-9496	33050 / 33051 / 33052 / 33053 / 33054	30-9386	CP-481S / CP-482 / CP-483/CP-484/CP-484S	30-9495
24197	30-9442	38682 / 39030	30-9442		

For the latest information—[www.gcelectronics.com](http://www.gcelectronics.com)

All quantities are single; BU's are packages of 10 Unless otherwise noted.





## CORDLESS BATTERY CHART (Cont.)

### Cordless Phone Batteries (Cont.)

PHONE MFR. NO.	GC BATTERY NO.
<b>UNIDEN TELEPHONE (continued)</b>	
XC1660 / XC302 / XC305	30-9499
XC310	30-9494
XC312 / XC314	30-9499
XC315 / XC315Y / XC320 / XC330 / XC340	30-9494
XC345 / XC3510 / XC3514 / XC3515 / XC3530	30-9499
XC3545 / XC365 / XC610 / XC611 / XC615	30-9499
XC645 / XC6450 / XC660 / XC714 / XC716	30-9499
XC717 / XC718 / XC810 / XCA4500 / XCA4510	30-9499
XCA4515 / XCA550 / XCA555 / XC556 / XCA650	30-9499
XCA660 / XCA680 / XCA1680 / AC1667	30-9499
XE200 / XE300	30-9433
XE355 / XE365	30-9499
XE400	30-9433
XE660 / XE665 / XE667 / XE785	30-9499
XE895 / XE985	30-9444
<b>UNITECH</b>	
2600 / TEL3400	30-9470
<b>VTech TELEPHONE</b>	
910 / 912 / 914 / 915 / 916 / 917 / 918 / 920	30-9390
921 / 1711 / 1712 / 1721 / 1731 / 1733	30-9390
1900 / 1901 / 1910 / 1920 / 1921 / 1922	30-9390
1930 / 1932 / 1940 / 1961 / 1962 / 1970	30-9390
2420 / 2421 / 2430 / 2431 / 2460 / 2461 / 2481 / 2910	30-9380
2920 / 2931 / 2932 / 2960 / 2961 / 2962	30-9390
5820 / 5831	30-9380
9000 / 9060 / 9105 / 9108 / 9111 / 9112 / 9115	30-9390
9121 / 9141 / 9151 / 9155 / 9171 / 9181 / 9241	30-9390
00-2421	30-9380
1910c / 1930cx / 1970ci	30-9390
20-2420 / 20-2431 / 20-2481	30-9380
2910c / 2950ci	30-9390
80-4032-00-00 / 80-4134-00-00 / 80-4280-00-00	30-9390
80-5017-00-00	30-9380
80-5071-00-00	30-9431
80-5074-00-00	30-9377
9060i / 910ADL / 912ADLc / 914ADLi	30-9390
914AKLi / 915ADL / 915AKL / 916ADLi	30-9390
917ADX / 918ADX / 920ADL / 921ADL	30-9390
LBA series	30-9431
MG2423 / MG2463	30-9431
SBA series	30-9377
Tropez 1064 / Tropez 1064XL	30-9495
VT1711 / VT1721 / VT1733 / VT1900 / VT1901	30-9390
VT1910 / VT1911 / VT1920 / VT1920c / VT1921	30-9390
VT1922 / VT1923 / VT1930 / VT1930cx / VT1932	30-9390
VT1940 / VT1961 / VT1962 / VT1970 / VT1970ci	30-9390
VT2420	30-9380
VT2428	30-9431
VT2431 / VT2461	30-9380
VT2468	30-9431
VT2900 / VT2910 / VT2910c / VT2920	30-9390
VT2920c / VT2950ci / VT2960 / VT9000	30-9390
VT9060i / VT9105 / VT9108	30-9390
VT9109	30-9377
VT9109	30-9431
VT9110	30-9377
VT9111 / VT9112 / VT9115	30-9390
VT9116 / VT9117 / VT9118 / VT9119	30-9377
VT9121	30-9390
VT9122	30-9377
VT9122	30-9431
VT9123 / VT9124 / VT9126	30-9377
VT9141 / VT9151	30-9390
VT9152	30-9377
VT9155	30-9390
VT9161 / VT9162	30-9377
VT9171 / VT9241	30-9390
VT9428	30-9431