

Coaxial RG-58, RG-59, & RG-62 Cable Stripper

12-458

Two blades to cut the insulation and dielectric in the same action

INSTRUCTIONS FOR COAXIAL CABLE STRIPPER

1. Use thumb to press the jaws open.
2. Insert coax cable through V-Block to have the coax cable reach cable guide level.
Release thumb to close jaws.
3. Insert the index finger through the hollow, then turn the coax cable stripper clockwise, 4 to 5 times.
4. Hold the tool and pull cable out.
5. Open jaws again and clean scraps away.
6. Snap out the built-in hex key wrench, and insert it into hex socket to align blades to fit your coax cable size. Turn clockwise to decrease size, and turn counterclockwise to increase size.
7. V-Block is reversible for RG-58/U and RG-59/U cable. Use hex key wrench to push the V-Block out of the stripper at original location.

*NOTE:

Blades have been preset for RG-58/U and RG-59/U coax cables, however, there are many different sizes of RG-58/U cable. If you find the stripper does not fit your cable size, adjust the blade by using the supplied hex key wrench.



UPC: 010151165107 HTS: 8205.59.5560
CoO: Taiwan HTS: 8203.20.6060

