

Telephone Butt Splices


UPC: 010151286765 # 30-8931



(26 - 19) AWG

Crimp

RoHS: CERTIFIED

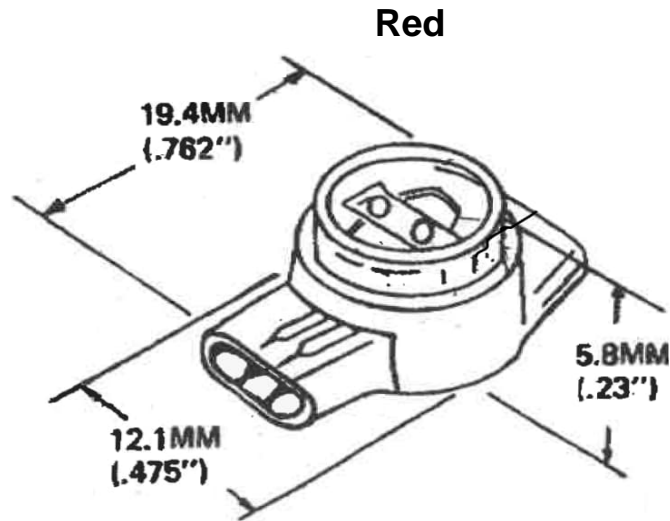

INSTRUCTIONS:

Insert wire(s) (3 ports for 2 or 3 wire connection) into port(s). Next depress the red button with a pair of pliers (if necessary).

HTS: 8536.69.8000
CoO: Taiwan
ECCN: EAR99